


SL0003 Updating LCD Display Pages via SMARTlift Diagnostic Port

01.0000	N : 0	0 11:0	
SL0003	Version 2	SmartLift	27 Feb 07

With the SMARTlift system 'ON' and the diesel engine running, plug the Downloading Tool (EL-34366) into the SMARTlift Diagnostic Port and PC USB port.



Figure 1 Start the Display Download Software by 'double-clicking' the icon. (Fig 2)

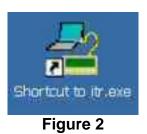

Click on the Open File icon (Fig 3)



Service Info - Smartlift



Figure 3

Navigate to "K:\SMARTlift Program Files\" and In the "Files of type" field, select "Transmit data files" as shown in Fig 4. Select either "Digital Control_EN.dat," "Load Monitoring_EN_FR_ES_PT_IT.dat," or "Load Monitoring_EN_FR_NL_CZ_DE_SE.dat" depending on requirements (Fig 4)

Open		? ×
Look in:	SMARTIik Display Program 💌 💠 🗈 🖆 🎞 🕶	
History Constant Desktop	Archive, do not use Digital_Control_EN.dat Load_Monitoring_EN_FR_ES_PT_IT.dat Load_Monitoring_EN_FR_NL_CZ_DE_SE.dat	
My Documents My Computer		pen

Figure 4.

Press the 'Send Data to Device Button' as shown in Fig 5



Figure 5

Ensure that the settings are as shown below in Fig 6, and press OK

Configu	re PC in	terface		
nterface				ОК
CAN PEA	K-NET		- >	Cancel
				Detail
Busrate		C Free CAN	Node ID	3_
C 10 C 20	125 250	C SELECAN	TX ID	515_
C 50	C 500	CA I-Open	RX ID	387_
○ 100 ○ 1		☐ 29-Bit ID Che	w -	
				•

Figure 6

The picture on the Display should change to DOWNLOAD... then to CACHING.... once the display shows only the Steelbro Logo, the task is completed, the cable can be disconnected and the machine switched off.